

BALANCE-SYNCRO

Ratchet Back Height Adjustment

Simply lift back to desired position and back locks automatically. To release and reset back position, lift back completely to top stop and return to bottom stop and then move up to the new position.

Infinite Seat Angle & Back Angle Adjustment

To change seat and back angle, pull paddle up while seated, push paddle down to lock in desired locations. Seat and back will free float/rock.

Pneumatic Height Adjustment

To lower, lift paddle while seated. To raise, lift paddle with your weight off seat.

Tension Knob

Turn clockwise to increase tension, turn counter-clockwise to decrease tension.

